

INSTALLATION INSTRUCTIONS

Tools you will need



Safety Glasses




Drill





Pencil




Tape Measure

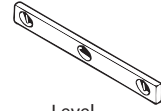


Level

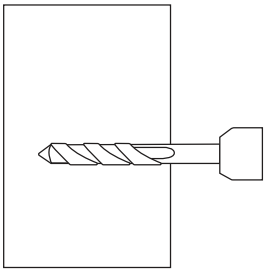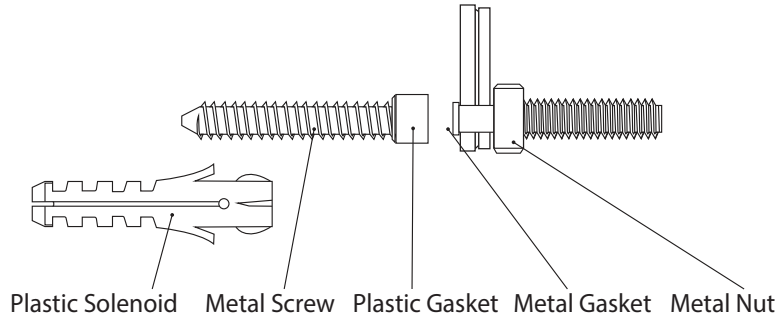


1. Drill two holes in the required position on the wall using a 14mm masonry drill bit, to a depth of 75mm.

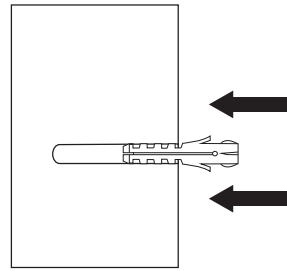


2. Push a wall plug into each hole.

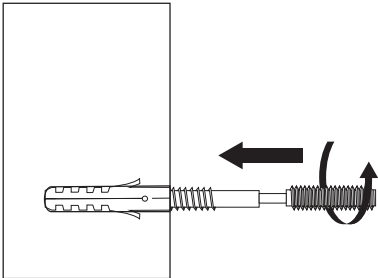

3. Screw a fixing bolt into each fixing plug using a 8mm spanner until the spanner contacts the wall.

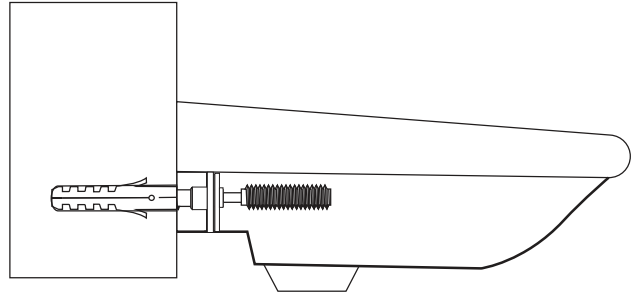

4. Place the basin in position against the wall. Locating the fixing bolts through the holes in the rear of the basin. Push a plastic washer followed by a metal washer, onto each fixing bolt.

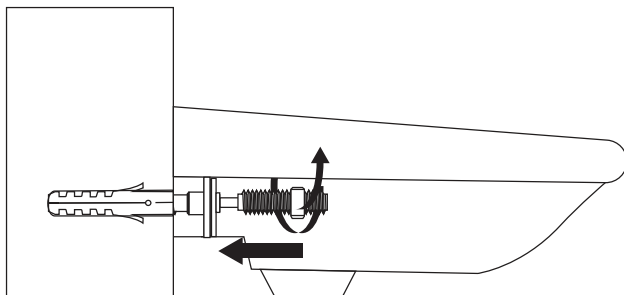

5. Screw a metal nut onto each fixing bolt to secure the basin.
Caution: Do not overtighten, as this may damage the ceramic.